



## S2X100 Quick Start Guide

This guide is intended to let you install the hardware and software and start to use this device quickly. For more detailed information, please refer to our website.

<http://www.dynoninstruments.com>

### Package Contents:


- 1 x S2X100 PC-based DSO
- 2 x Proprietary Scope Cables
- 2 x Pomona Test Clips
- 1 x Software CD
- 1 x USB Cable



### Software Installation:

1. Double click the "Setup.msi" icon on the CD and follow the instructions

**Note: .NET OS extensions are required**

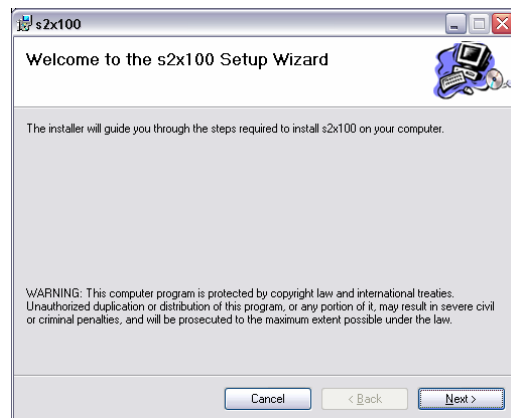

**OR...**

Drag the "Dynon Instruments" folder from the software CD onto your hard disk and place it in the "Program Files" folder.

The software installation will place the USB driver for the S2X100 in the following location:

**C:\Program Files\Dynon Instruments\s2x100\Driver**


### Driver Installation:

---


1. Plug the S2X100 into an available USB port. Windows will ask for the driver for Dynon Instruments.
2. Make sure "No, not this time" is selected and click the "Next" button to continue the installation.



3. Select "Install from a list or specific location [Advanced]" and click "Next".

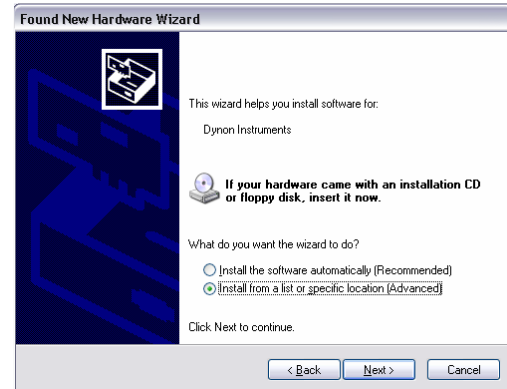

4. Check the "include this location in the search" box and click the "Browse" button

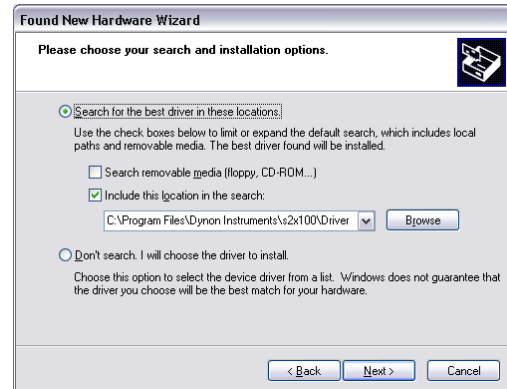


5. Navigate to the driver folder listed below and click "OK".


**C:\Program Files\Dynon Instruments\s2x100\Driver**



6. Click "Continue Anyway"

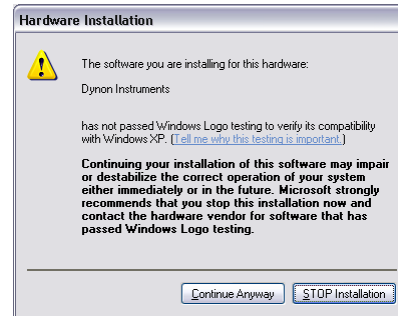


7. Click "OK" to continue.

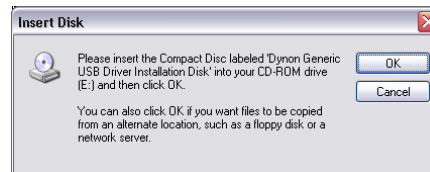

8. Click the "Browse" button in the bottom right and navigate to the file below and then click "OK".

**C:\Program Files\Dygon Instruments\s2x100\Driver\Dygon.sys**

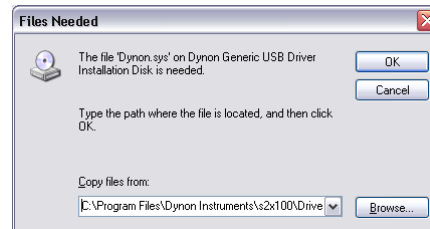

9. The driver installation is now complete.  
Click 'Finish'

